



Universal Walk-In Pen Assembly Instructions




Important Notes:

Lay out all components prior to start of assembly. A flat, level surface is recommended for assembly.



If any components are missing or damaged, do not return to retailer. Please call Rugged Ranch Products at: 760-734-3748

Visit our website to see our complete line of products.

www.ruggedranch.net

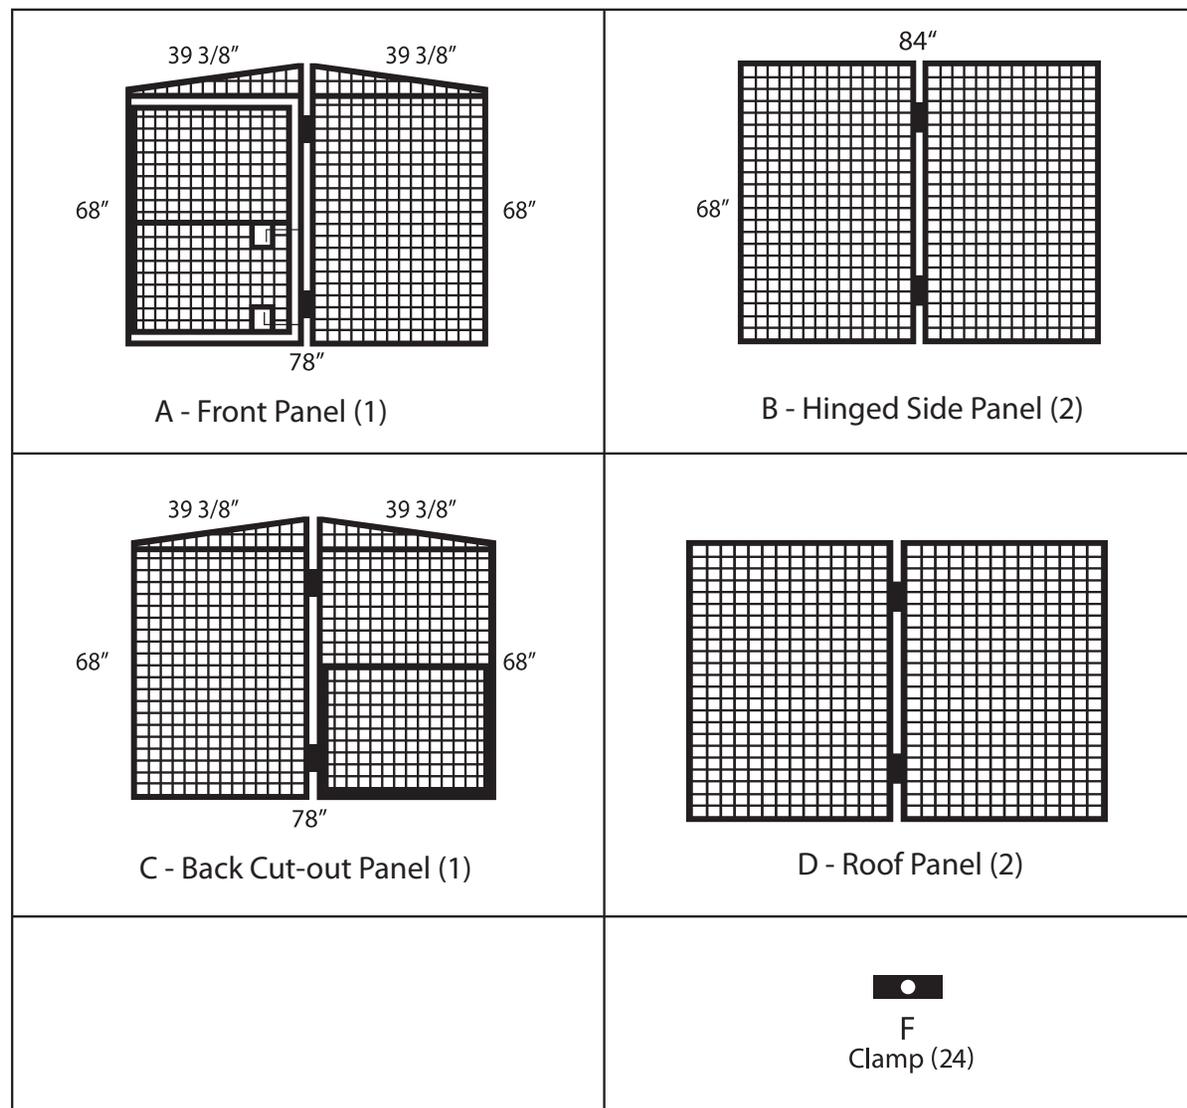

Don't forget to complete your Universal Walk-In Pen by adding the optional Wooden Chicken Hutch or Dog House. Both accessories attach outside the pen via knock-out, back panel to save room inside the pen.

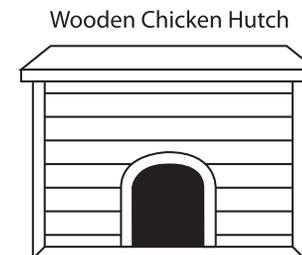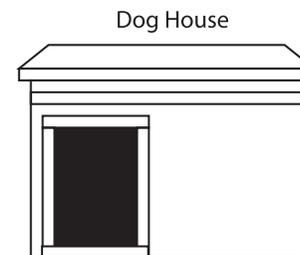

Step 1

Lay out Front (A), Back (C) and Side Panels (B) as shown.



Step 2

Starting with the Back (C) and Side Panel (B), attach the two panels together with the Back Panel on the **outside** using two Clamps (F) in the cut out spaces provided.

*Note: If you are removing the Pop-Out Panel, take it out before step 3.



Step 3

Attach opposite Side Panel (B) and then Front Panel (A) (with two Clamps (F) per corner) making sure that the Front and Back Panels are on the **outside** of the Side Panels.



Step 4

Clamp Roof Panels to top of cage using two Clamps per panel. Keeping the cage and roof corners square is very important.



Step 5

Repeat Step 4 for the 2nd roof panel.



Available Options

- Dog House
- Wood Hutch
- Canvas Top
- 10' x 10' Shade Top
- Extension Kit

