


Wood Nesting Hutch Assembly Instructions

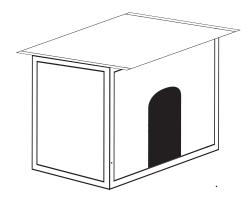

Complete your Wood Hutch by attaching to the Universal Welded Wired Pen!!



Shown with optional Universal Welded Wire Pen.


Important Notes:

Lay out all components prior ro start of assembly.

Flat level surface recommended for assembly.

If any components are missing or damaged do not return to retailer. Please call Rugged Ranch Products at: 760-734-3748.

Please visit our website to see our complete line of Rugged Ranch Products. www.ruggedranch.net

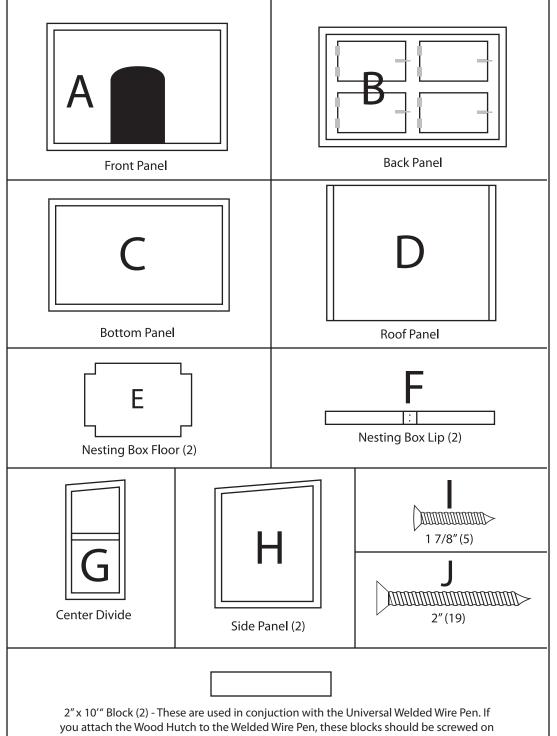


to the back edge to level the hutch and keep it off of the ground.

Step 2


Step 3

Stand Front Panel (A) upright and attach both Side Panels (H) using pre-drilled holes in Front Panel (A). Two (2) screws (J) wil be used for each side. Ensure that the ledge on Side Panels (H) are facing the inside of the box.

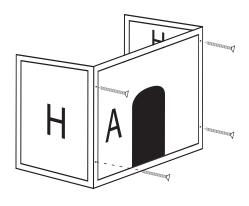


Step 4

Insert both Nesting Box Floor Panels (E) on either side of Center Divide Panel (G).
No screws are necessary.

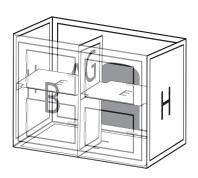


Place Floor Panel (C) inside previously constructed panels. Next, attach Back Panel (B) to both Side Panels (H) using (4) screws (J). Two per side.

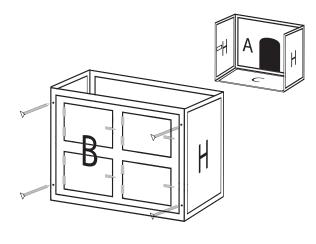


Step 5

Place one Nesting Box Lip (F) one Center Divide Panel (G) on the Floor Panel (C) and attach using (2) screws (I). Repeat this step for the upper Nesting Box Lip Panel (F).

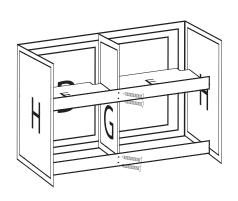

Insert Center Divider Panel (G) and attach to Back Panel (B) using (1) screw (J) at pre-drilled hole on Back Panel (B).

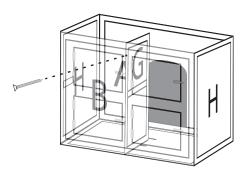

Step 6

Place Roof Panel (D) on top of Wood Hutch.
The roof is meant to have overhang on the front and back. You can place it where it suits you and screw in place using (4) screws (J).
Also, take the time to place (4) screws (J) into the pre-drilled holes at the bottom of the Front and Back Panels to secure them to the Bottom Panel. You will use (2) screws per side.

