



Universal Walk-In Pen Extension Kit Assembly Instructions



Important Notes:




A flat level surface is recommended for assembly.



If any components are missing or damaged,
do not return to retailer.

Please call Rugged Ranch Products at:
760-734-3748

Visit our website to see our complete line
of products.

www.RuggedRanch.net

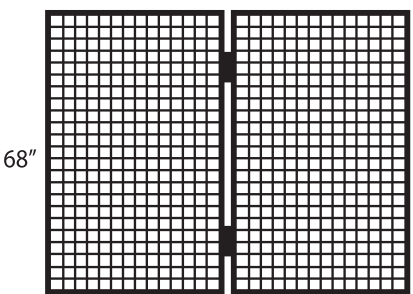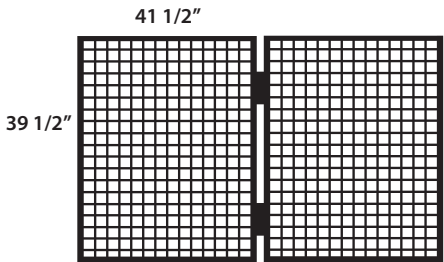 <p>A Hinged Side Panel (2)</p>	 <p>B Roof Panel (2)</p>
	 <p>Clamp (24)</p>

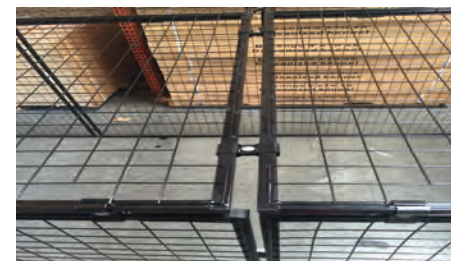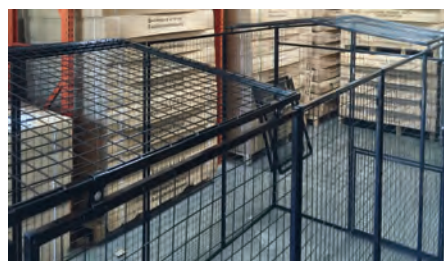

The roof panels that come with the complete Walk-In Pen are wider than the roof panels that are in the extension kit.


1. The wider roof panels that come with the Complete Walk-In Pen attach to the front and back sides of the extended Walk-In Pen as shown.

2. The Roof panels that come with the Extension Kit are for the two middle roof sections. The Extension Kit side panels are the same size as the side panels that come in the Complete Walk-In Pen, they can go on either side.

3. Attach Extension Kit roof panels to the side panels as well as between the middle of the roof panels using the 2 clamps per panel as shown.

Don't forget to complete your Universal Walk-In Pen by adding the optional Wooden Chicken Hutch or Dog House. Both accessories attach outside the pen via knock-out, back panel to save room inside the pen.

Dog House

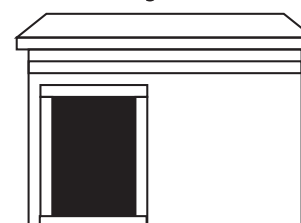

Wooden Chicken Hutch

