




## A-Frame Top Assembly Instructions

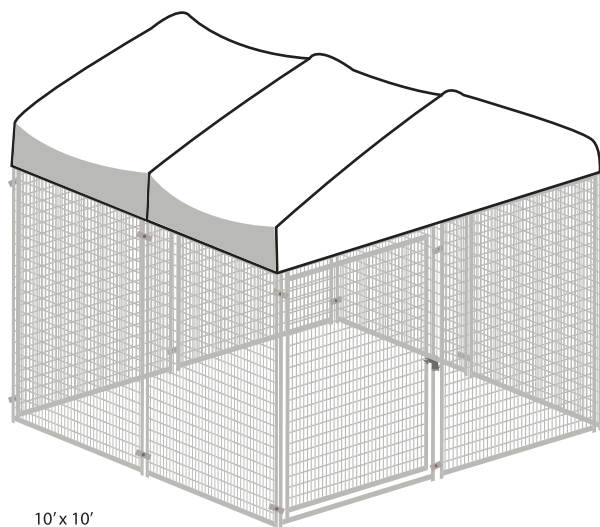

10' x 10'  
A-Frame Top  
pictured


### Important Notes:

Lay out all components prior to start of assembly.

Flat level surface recommended for assembly.


If any components are missing or damaged do not return to retailer. Please call Rugged Ranch Products at: 760-734-3748.

Please visit our website to see our complete line of Rugged Ranch Products.  
[www.ruggedranch.net](http://www.ruggedranch.net)

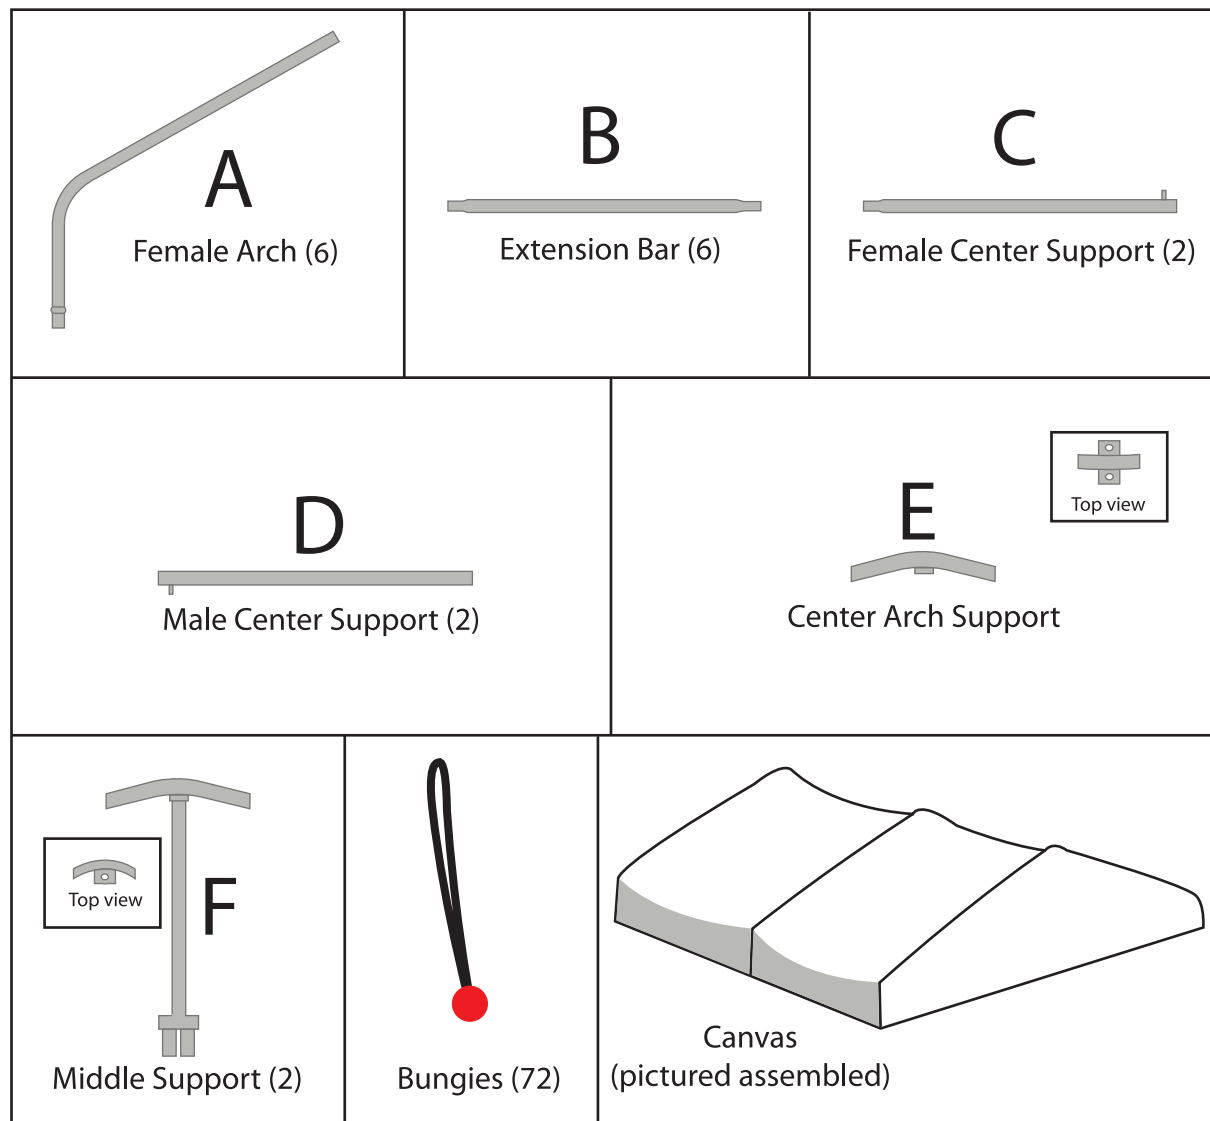


### Step 1

Lay out all components as shown.

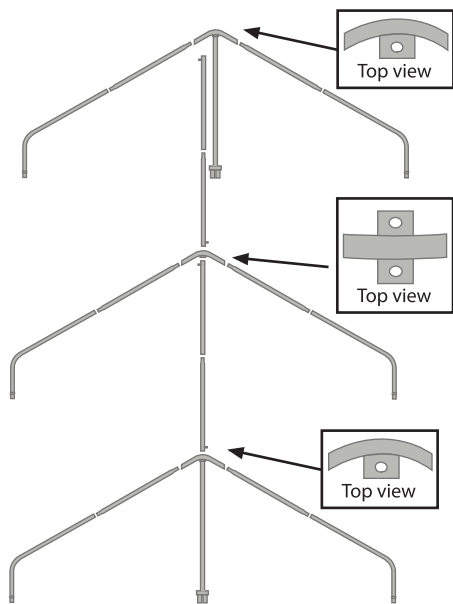


### Step 2

Connect all components as shown.

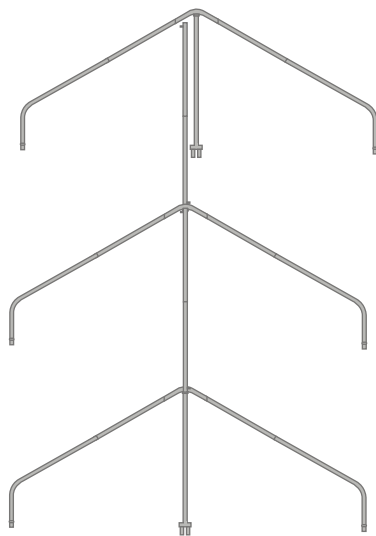


### Step 3

Insert all three assembled arches into top of kennel panels as shown.

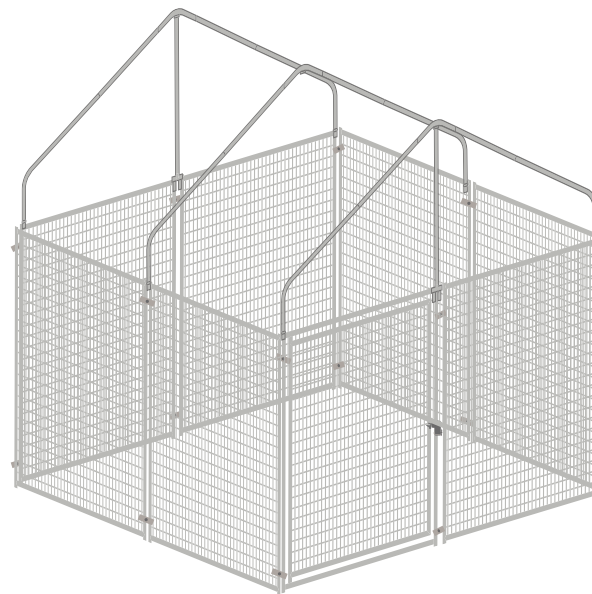

### Step 4

Insert both assembled middle support bars as shown. Use one smaller male and female parts together for the shorter distance.

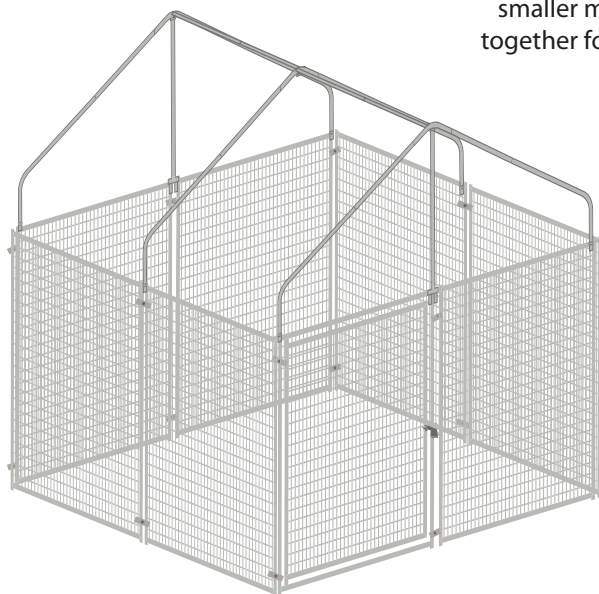

### Step 5

Install the cover as shown and tie down with provided bungies.

